WEIL-McLAIN

88 Boiler

Instruction - Top Insulation Installation

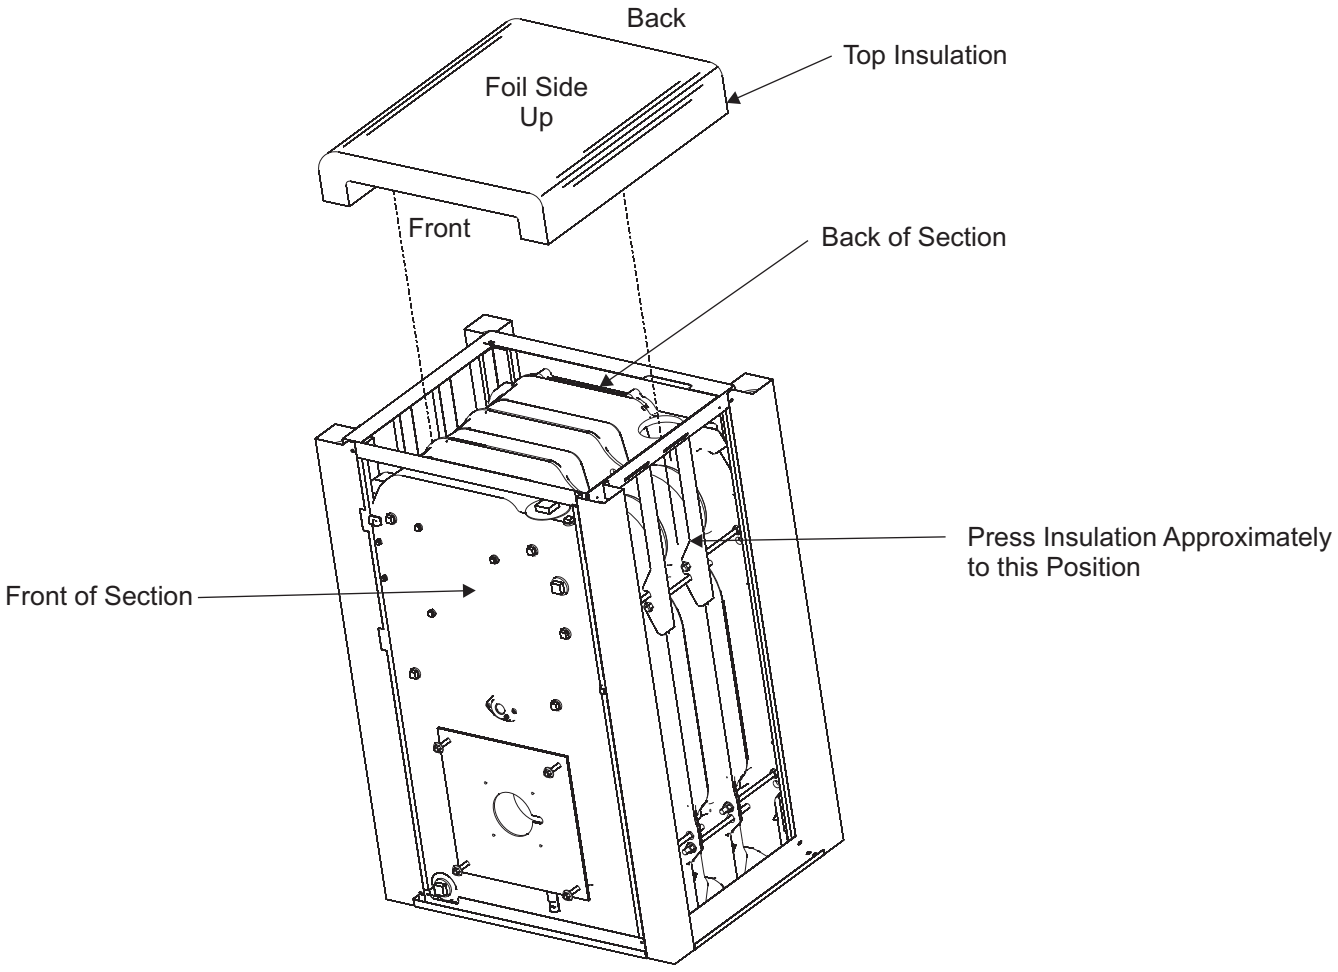

Top insulation installation.

1. Cut to length.
2. Center and align front and back of insulation to outside edges of front and back sections.
3. Center insulation on top of sections, and fold sides of insulation until folded sides of insulation compress between section and top mounting brackets.

WEIL-McLAIN

Weil-McLain
500 Blaine Street
Michigan City, IN 46360-2388
http://www.weil-mclain.com